

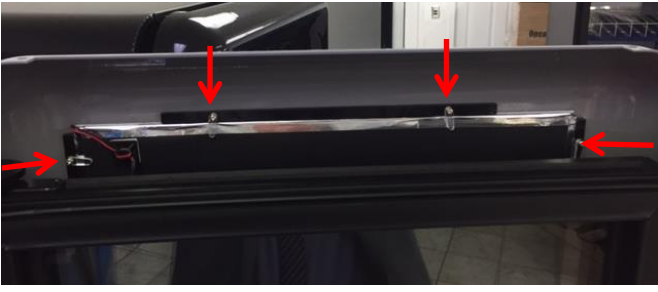


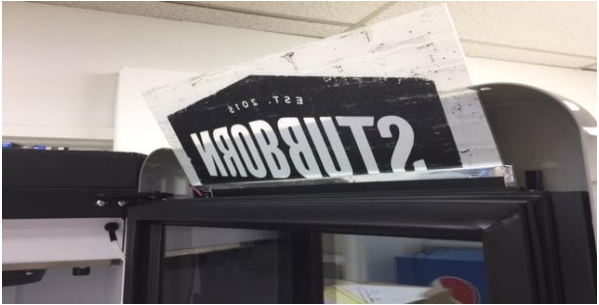




INSTRUCTIONS FOR Removing and Replacing PC8L Header Lens

#	Procedure	Visuals
1	<p>There are two (2) phillips head screws on the top of the door that need to be removed. Use hand tools only. Power screw drivers may strip the brass inserts.</p>	
2	<p>Remove the LED cover panel to gain access to the LED light panel.</p>	
3	<p>Loosen the four (4) phillips head screws to allow the tabs that hold the LED panel in place, to spin out of the way. Please use hand tools only.</p>	
4	<p>Gently pry the LED panel to gain access to the header lens positioned behind the panel.</p>	
5	<p>Slide the existing lens up and out of the header channel.</p>	

<p>6</p>	<p>Install the new header lens and ensure the new lens is positioned correctly in the channel. Avoid adding stress to the tabs holding the LED panel in place.</p>	
<p>7</p>	<p>Secure the LED panel by positioning the tabs and hand tighten with a screw driver.</p>	
<p>8</p>	<p>Re-install the LED panel cover</p>	
<p>9</p>	<p>Header lens complete</p>	